


## Head Nut Riveter

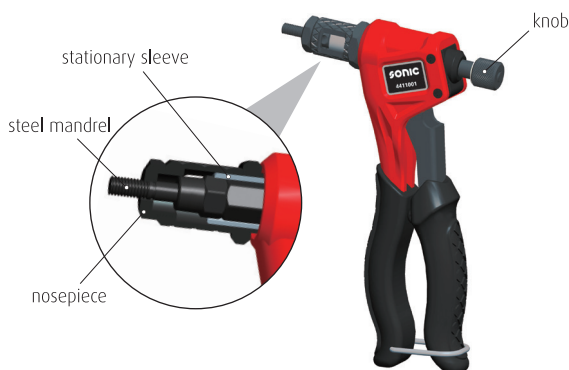

### Spare parts

Hand nut riveter M3, M4, M5, M6



Multifunctional spanner



## Working steps

1. Open the handle completely and place nut onto the mandrel.
2. Screw the nut into the screw stem.



3. Put the nut into the riveting hole, close the handle to deform the nut to rivet in place.
4. Rotate the knob counterclockwise to remove riveter after riveting.



## Replace the riveting rod

1. Use a matched wrench to remove the nosepiece.
2. Push the sheath back and separate the hexangular of screw from sheath. Push the sheath to the end to rotate the screw of riveter outward and remove it.



3. Install the required mandrel. Push the sleeve backwards and fit the connecting rod.
4. Screw in the same specification nosepiece to complete installation.

