

Hub & Brake Rotor Gauge

Art. Nr: PT5249

Specifications

Measuring range: 0~10mm

Graduations: 0,01mm

Aluminum clamp range: 20~100mm

Instructions

- 1) Position the aluminium clamp to the steering knob (A) or onto the damper stock, tighten it.
- 2) Position (B) to be away from the disc, tighten. (B)
- 3) Make sure (C) is also away from the disc and the disc can spin, tighten. (C)
- 4) Attach the gauge (D) slightly to the disc and tighten it. Reset it to 0. Ready to measure.

