

## How to extract PSA's new anti-theft wheel locking bolts

### 1. Description of the locking bolt

- Two free turning rings
- Only 4mm space for clamping to the bolt  
=> risk of sliding off while unbolting.



## 2. Extraction

### a. Drilling the first ring (use Guide N°3)



b. Drilling of the second ring and extraction.

