








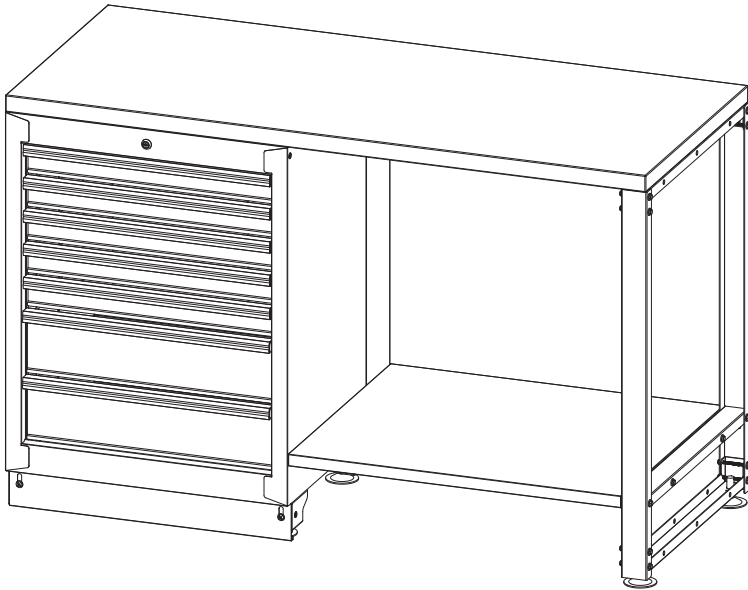


Pro**Meister**






User Guide

**26"6 Drawer WorkBench with Optional
Stainless Worktop**


Product Specifications






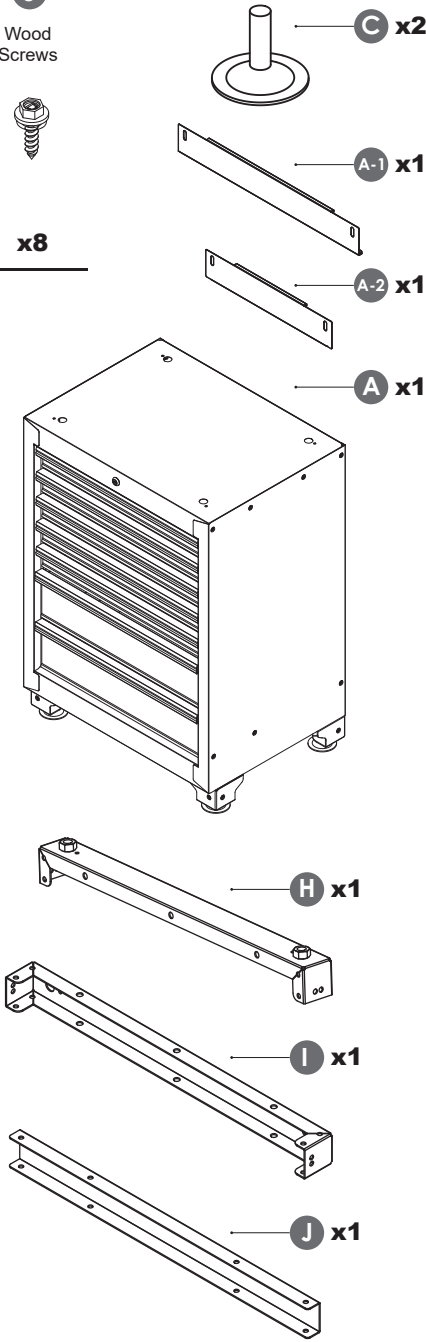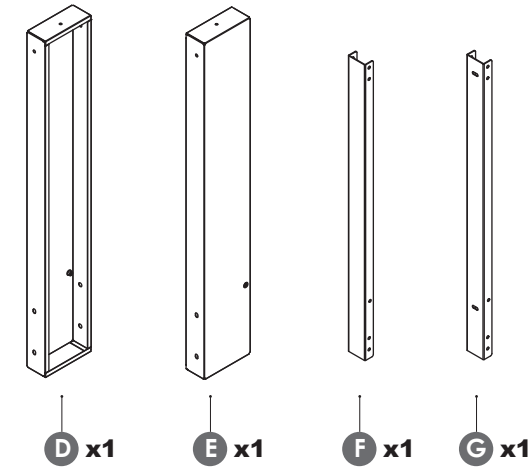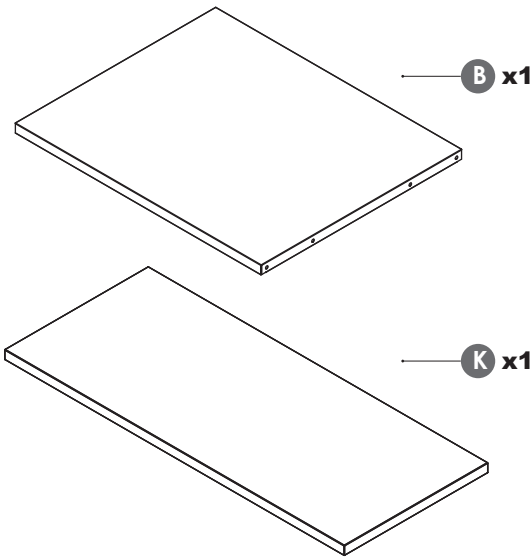1	2	3	4	5	6	7	8	
M6x16	M6x70	6x16x2T	M6	Front Cover Washer	Front Cover Screw	Front Cover Screw Kit	Wood Screws	
								
x10	x12	x24	x12	x4	x4	x2	x8	




Instructions

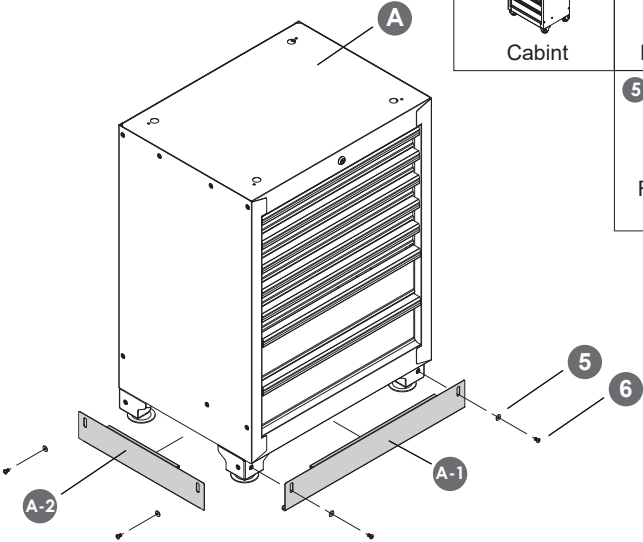



STEP.1

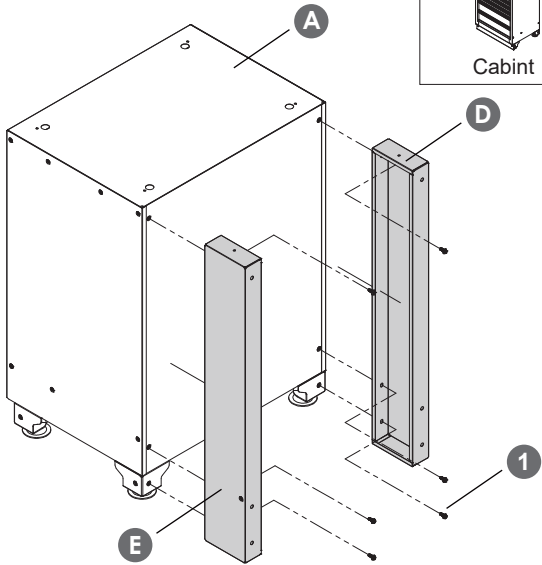

A 1PC  Cabint	A-1 1PC  Front Cover	A-2 1PC  Side Cover
5 4PCS  Front Cover Washer	6 4PCS  Front Cover Screw	


STEP.2






A 1PC  Cabint	D 1PC  Back Extension-Left	E 1PC  Back Extension-Right
	1 6PCS  M6 Hexagon Cross Screw w/Washer	


Instructions

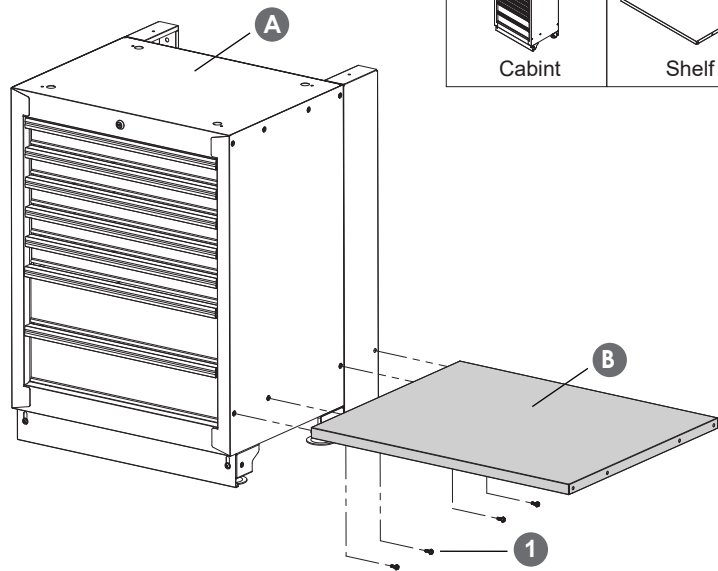







STEP.3

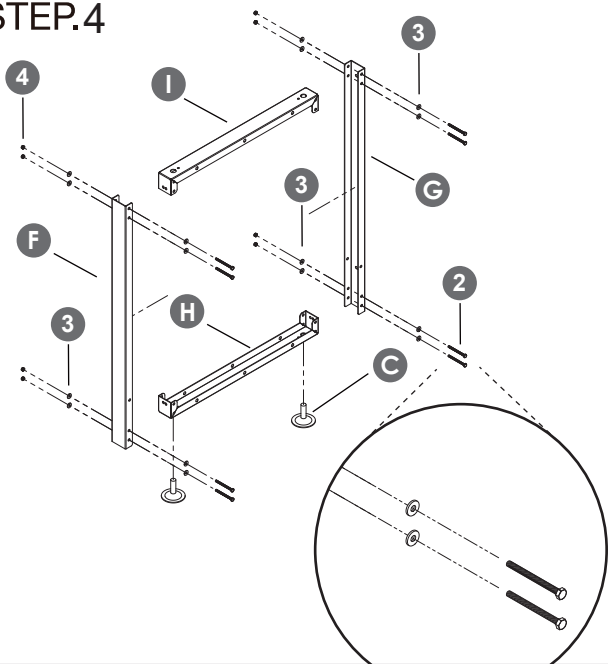

A 1PC	B 1PC	1 4PCS
		
Cabinet	Shelf	M6 Hexagon Cross Screw w/Washer






STEP.4




4 8PCS	3 16PCS
	
M6 Nylon Nut	M6 Washer
2 8PCS	H 1PC
	
M6 Hexagon Screw 70 MM	Worktop Frame Bottom
I 1PC	F 1PC
	
Worktop Frame Top	Worktop Frame-Front
G 1PC	C 2PCS
	
Worktop Frame-Back	Adjust Feet

Instructions


STEP.5

J 1PC	B 1PC	2 4PCS	4 4PCS	3 8PCS
				
Shelf	Shelf	M6 Hexagon Screw 70 MM	M6 Nylon Nut	M6 Washer

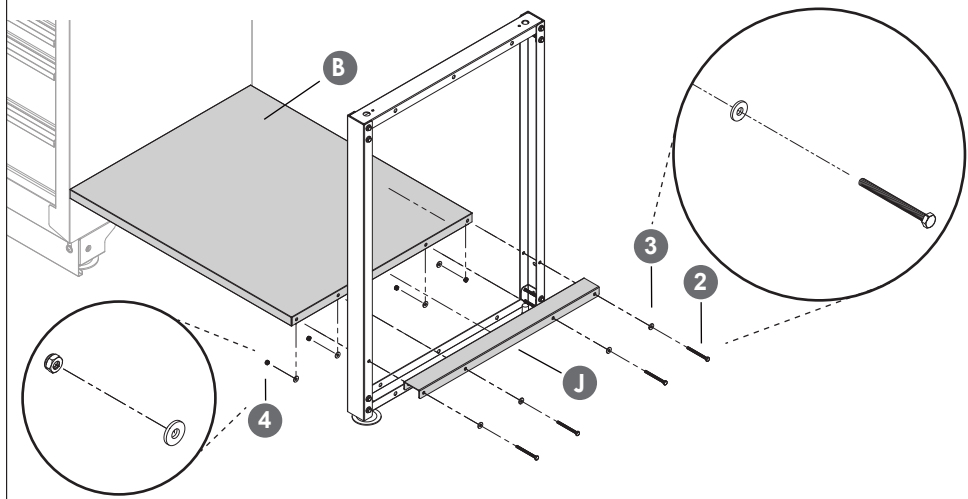


STEP.6-1

To remove a drawer, retaining clips on sliders need to be released by pushing lever up(left side of sliders) and down(right side of sliders) at the same time, and sliding out the drawer.

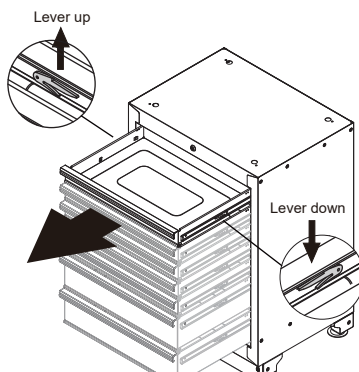

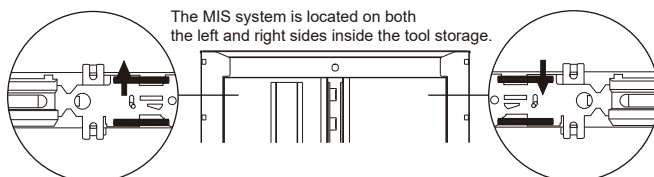

STEP.6-2




After removing the first drawer, push the MIS switch on the right side downward and the MIS switch on the left side upward. Then, you can remove the other drawers.

Instructions

STEP.7


K	1PC	8	2BO/8PCS
			
Stainless steel tabletop		Wood screws	

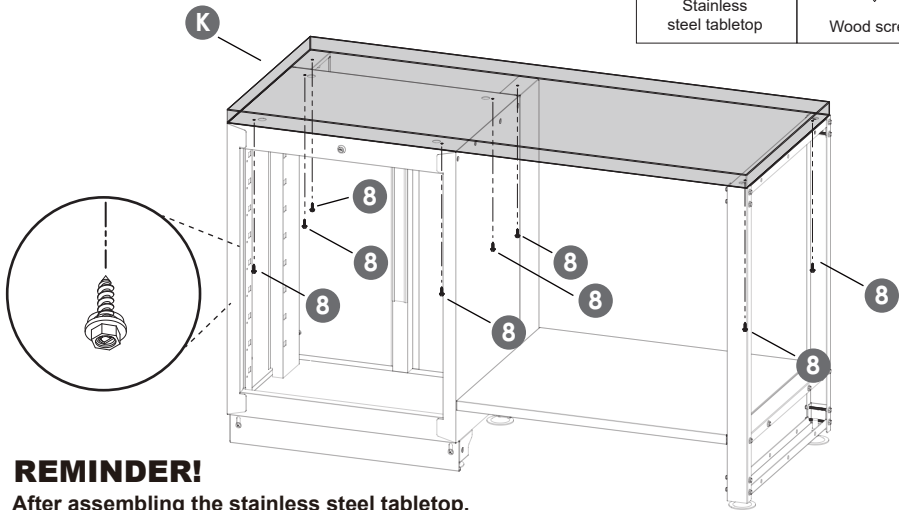

REMINDER!

After assembling the stainless steel tabletop, please remember to reassemble the drawers!

STEP.8

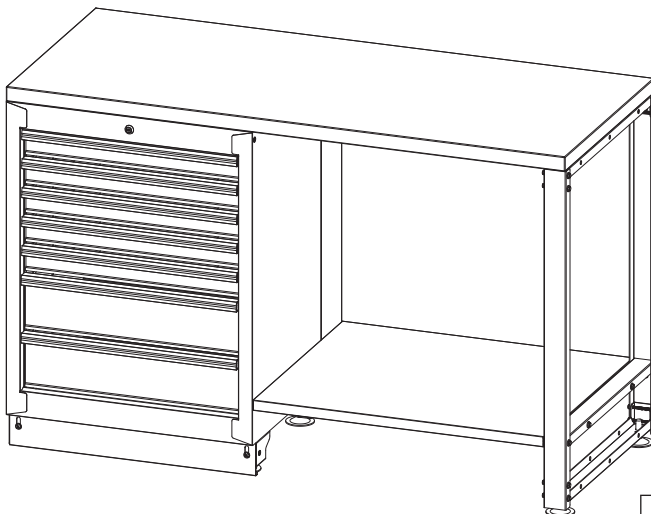

Finish!

Produced in Taiwan for
Bileko Car Parts AB
P.O. Box 542
S-645 25 Strängnäs, Sweden
Tel: +46 771 72 00 00
www.promeister.com